HI-SPEED USB AUDIO/VIDEO GRABBER USER MANUAL

MODEL 161336

MANHATTAN™

MAN-161336-UM-0111-01

INTRODUCTION

Thank you for purchasing the MANHATTAN® Hi-Speed USB Audio/Video Grabber, Model 161336.

Ideal for sharing favorite video clips or “snapshots” through e-mail or on the Web, the Hi-Speed USB Audio/Video Grabber records and processes data from your camcorder, TV or other media device equipped with S-video or RCA outputs: Just connect the media source to a desktop or notebook computer to capture, convert and edit content. A single-button control with LED indicators activates a built-in chip that encodes directly in MPEG 1/2/4 format, and a full version of the application software is included to help get more professional results with minimal technical proficiency.

By following the instructions in this user manual — or the simpler setup procedure in the printed quick install guide included with the product — you’ll soon be enjoying these popular features:

- Simple, single-button video snapshot and copy-and-pause control
- Plug and Play installation – requires no batteries or external power
- Compact, lightweight design ideal for travel and notebook computers
- Lifetime Warranty (For a complete list of country-specific warranties, go to www.manhattan-products.com/warranty.)

Package Contents

- Hi-Speed USB Audio/Video Grabber
- RCA extension cable
- Software and driver CD
- Quick install guide

Minimum Recommended System Requirements

- Hi-Speed USB equipped computer with CD-ROM (for software installation)
- 256 MB RAM, 1 GB free HD space, sound card (AC97 compatible), graphics card (DirectX 9.0c compatible) and Pentium 4 (1 GHz) or above
- Windows XP/Vista/7 operating system

NOTE: Screen images presented in this user manual may have been modified to fit the format and can vary slightly depending on your operating system, but the basic installation/operation steps are similar.

HARDWARE CONNECTIONS

Using the included RCA extension cable if needed (not depicted in the setup image below), make the appropriate connection(s) between your computer and the media source — camcorder, TV or whatever — through the Hi-Speed USB Audio/Video Grabber.

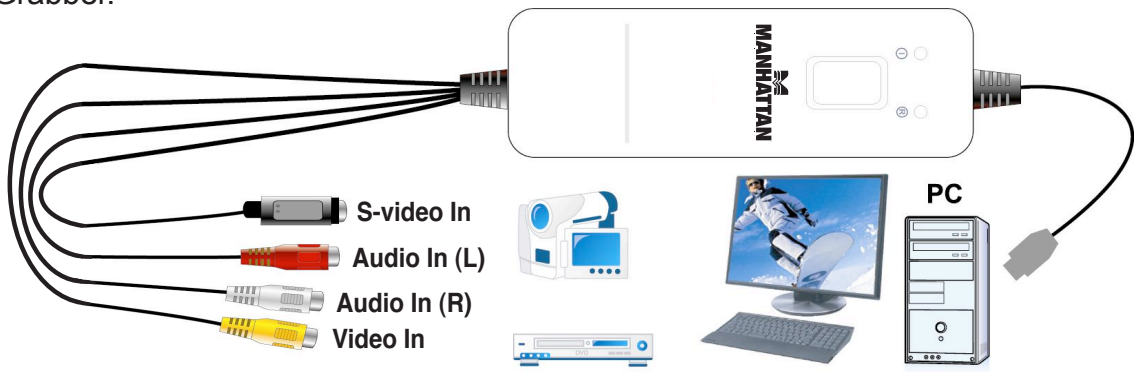

1. If the device has been connected properly, the Found New Hardware Wizard welcome screen displays (below). Click “Cancel.”

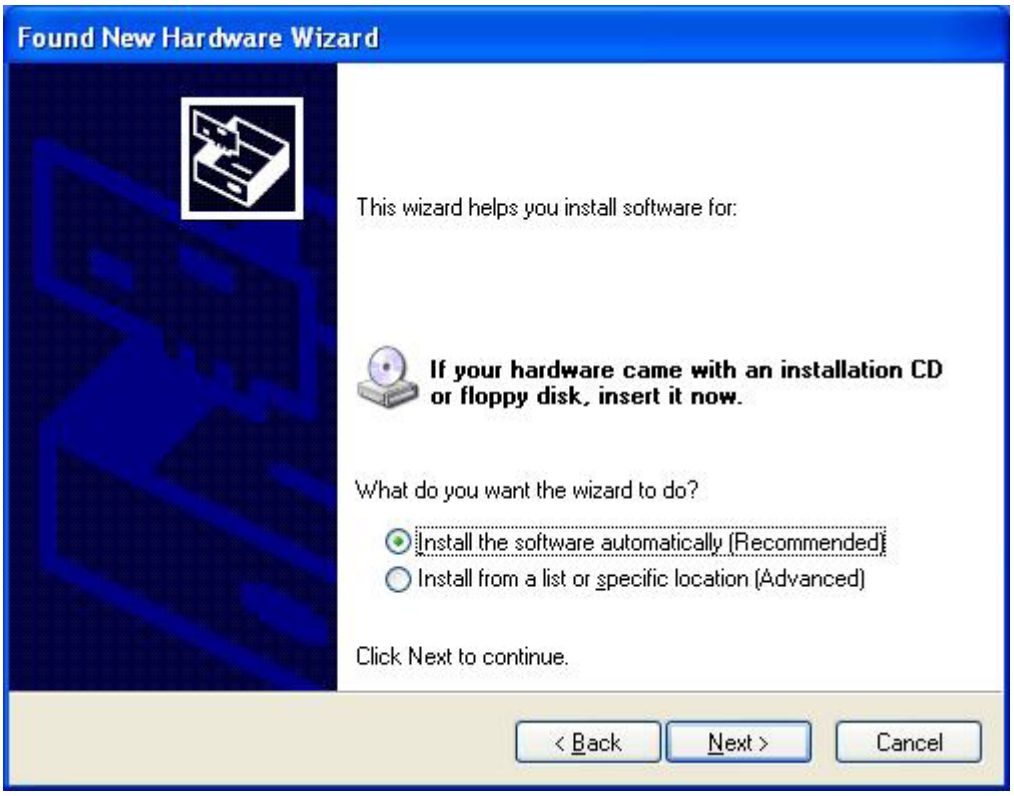
Found New Hardware Wizard
This wizard helps you install software for:
If your hardware came with an installation CD or floppy disk, insert it now.
What do you want the wizard to do?
Install the software automatically (Recommended)
Install from a list or specific location (Advanced)
Click Next to continue.
< Back
Next >
Cancel

DRIVER INSTALLATION

1. Insert the enclosed software CD in the CD-ROM drive to display the initial menu. Click “Driver Install” or run Driver\Setup.exe.

2. The InstallShield Wizard’s initial Preparing to Install screen displays with a status bar to indicate that the process is underway. When the Ready to Install the Program screen displays, click “Install.” Click “Back” to return to the previous screen; click “Cancel” to stop the installation.

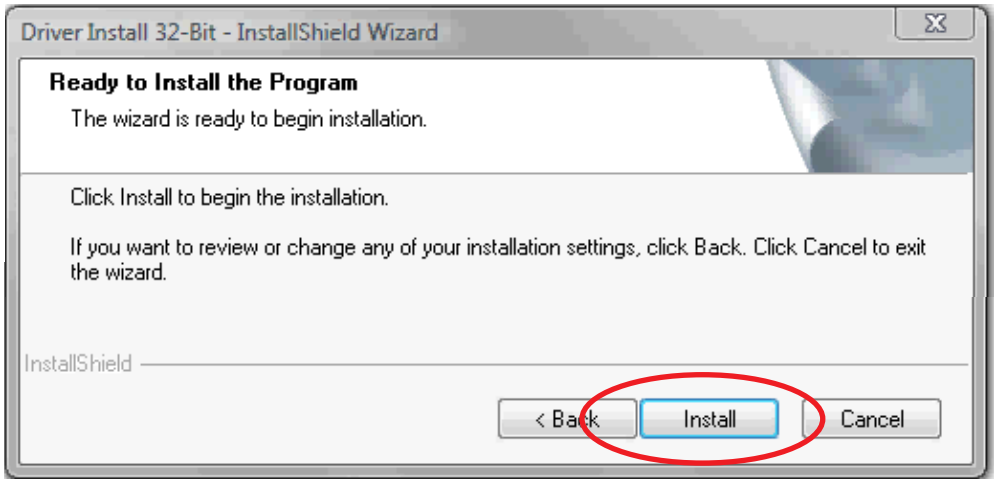
Driver Install 32-Bit - InstallShield Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

3. Subsequent Status screens will indicate installation progress. If Windows Security prompts display during installation, click “Install” or “Continue Anyway” to proceed.
4. When the InstallShield Wizard Complete screen displays, click “Finish.” You can now proceed with the EZ Grabber software installation, as detailed below.

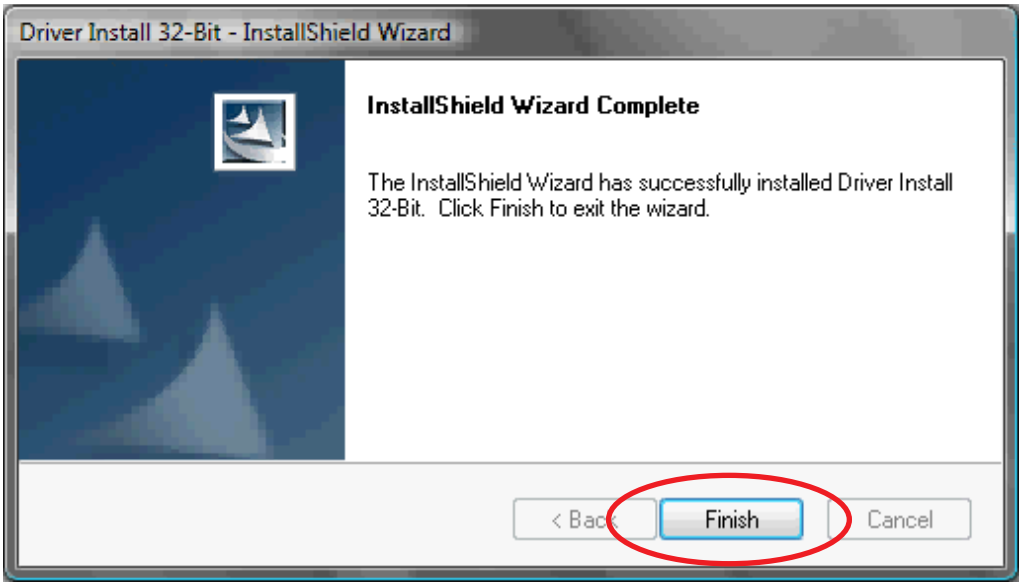
Driver Install 32-Bit - InstallShield Wizard
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed Driver Install 32-Bit. Click Finish to exit the wizard.
< Back
Finish
Cancel

EZ GRABBER INSTALLATION

1. Click “Software Install” on the menu screen or run “EZ Grabber\Setup.exe” to install the application.
2. The InstallShield Wizard’s Preparing Setup screen displays with a status bar to indicate the process is underway. When the Ready to Install the Program screen displays, click “Install.” Click “Back” to return to the previous screen; click “Cancel” to stop the operation.

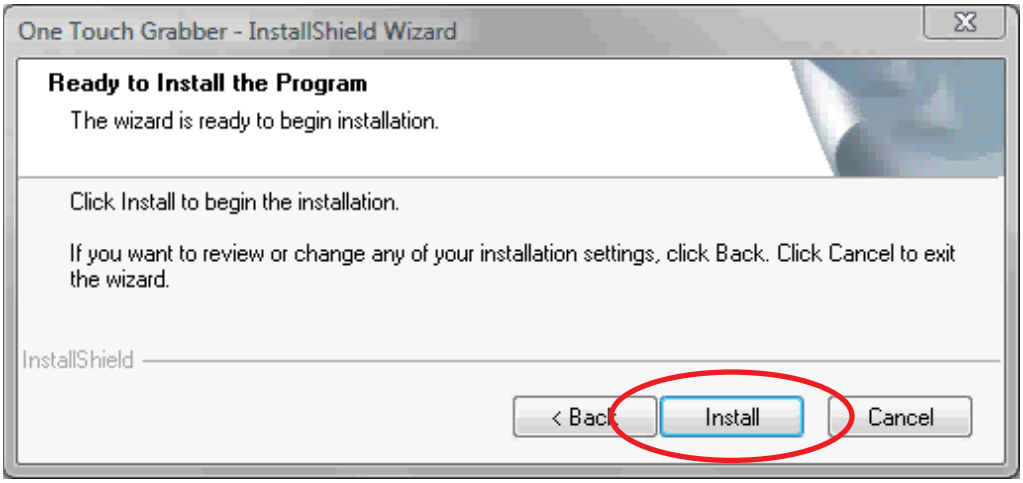
One Touch Grabber - InstallShield Wizard
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

3. Subsequent Status screens may display to indicate installation progress. When the InstallShield Wizard Complete screen displays, click “Finish.”

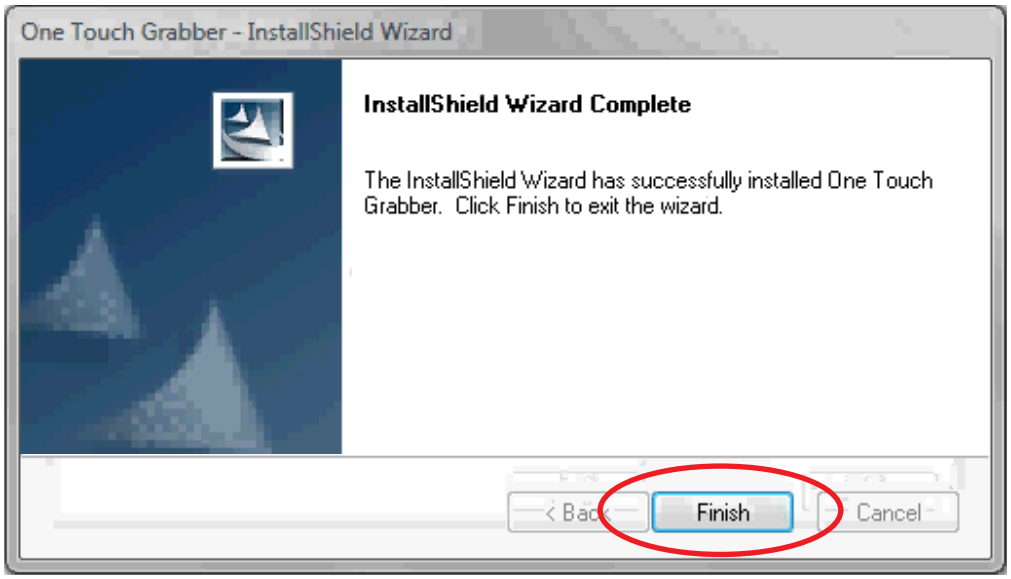
One Touch Grabber - InstallShield Wizard
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed One Touch Grabber. Click Finish to exit the wizard.
< Back
Finish
Cancel

4. Once the EZ Grabber icon appears on your desktop, you can launch the application to display the EZ Grabber Main User Interface (shown below).

EZ GRABBER MAIN USER INTERFACE

1. Status
2. Setup menu
3. Snapshot
4. Start recording
5. Stop recording
6. Fast forward
7. Fast reverse
8. Pause
9. Play recorded files
10. Status window
11. Stop playback
12. Next track
13. Previous track
14. Open recorded file
15. Minimize window & controls
    Full screen window & controls
    About (version & other details)
    Exit

VHS TO DVD SOFTWARE INSTALLATION

1. Click “Honestech VHS to DVD” on the menu screen or run “VHS2DVD\Setup.exe” to install the editing application.

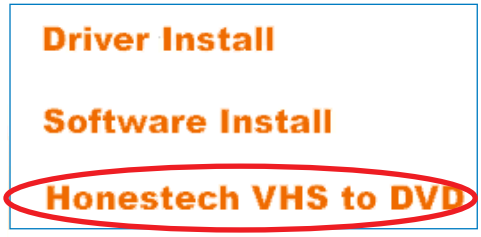

2. When the Choose Setup Language screen of the InstallShield Wizard displays, select a language and click “Next.” Click “Back” to return to the previous screen; click “Cancel” to stop the installation.

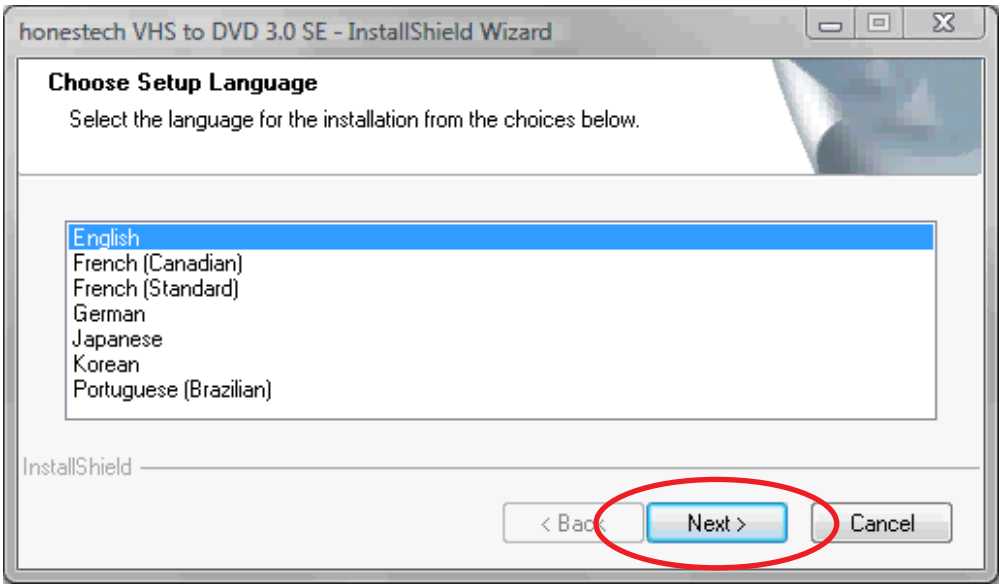

3. When the InstallShield Wizard’s Welcome screen displays, click “Next.”

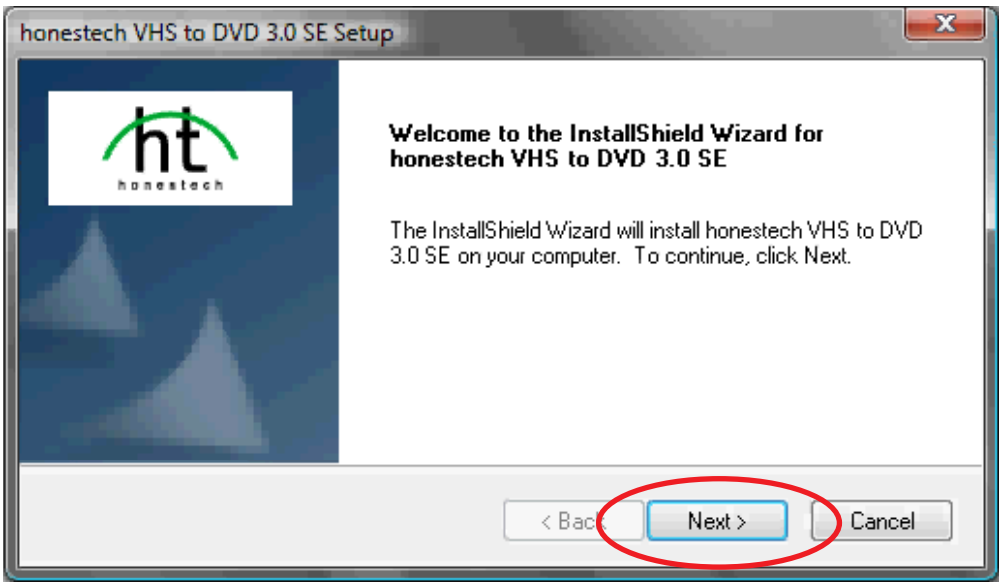
honestech VHS to DVD 3.0 SE Setup
ht
honestech
Welcome to the InstallShield Wizard for honestech VHS to DVD 3.0 SE
The InstallShield Wizard will install honestech VHS to DVD 3.0 SE on your computer. To continue, click Next.
< Back
Next >
Cancel

MANHATTAN

4. When the License Agreement screen displays, select “I accept...” and click “Next” to continue.

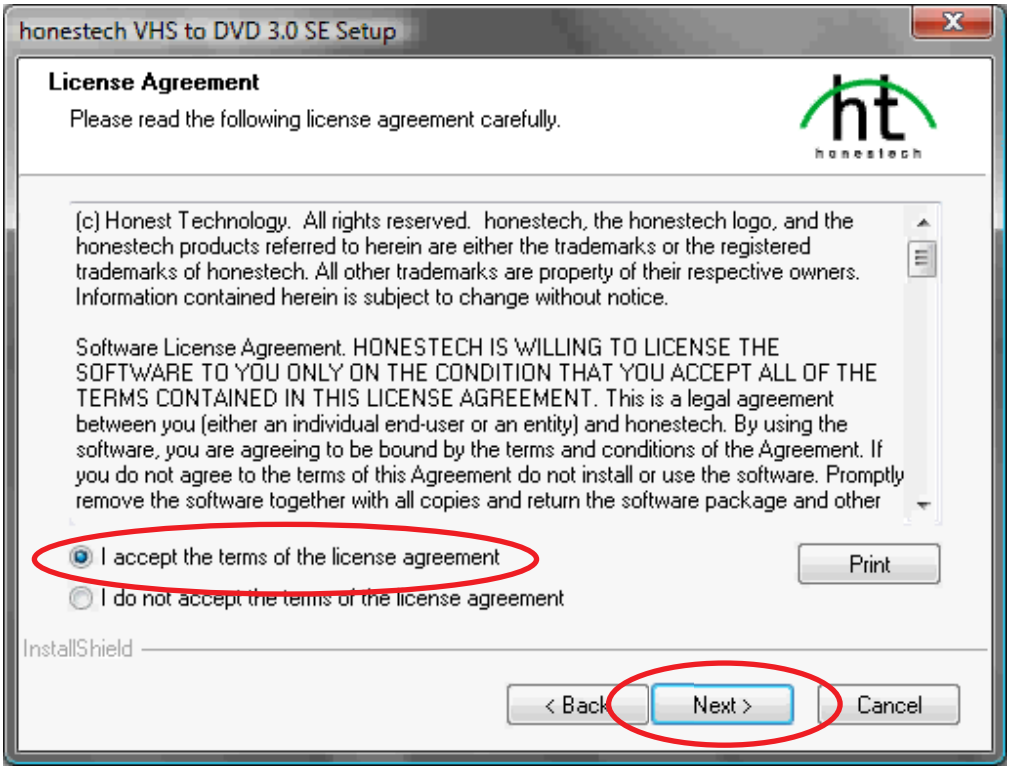
honestech VHS to DVD 3.0 SE Setup
License Agreement
Please read the following license agreement carefully.
(c) Honest Technology. All rights reserved. honestech, the honestech logo, and the honestech products referred to herein are either the trademarks or the registered trademarks of honestech. All other trademarks are property of their respective owners. Information contained herein is subject to change without notice.
Software License Agreement. HONESTECH IS WILLING TO LICENSE THE SOFTWARE TO YOU ONLY ON THE CONDITION THAT YOU ACCEPT ALL OF THE TERMS CONTAINED IN THIS LICENSE AGREEMENT. This is a legal agreement between you (either an individual end-user or an entity) and honestech. By using the software, you are agreeing to be bound by the terms and conditions of the Agreement. If you do not agree to the terms of this Agreement do not install or use the software. Promptly remove the software together with all copies and return the software package and other
I accept the terms of the license agreement
I do not accept the terms of the license agreement
Print
InstallShield
< Back
Next >
Cancel

5. When the Choose Destination Location screen displays, click “Next” to direct the file to the default (recommended) location.

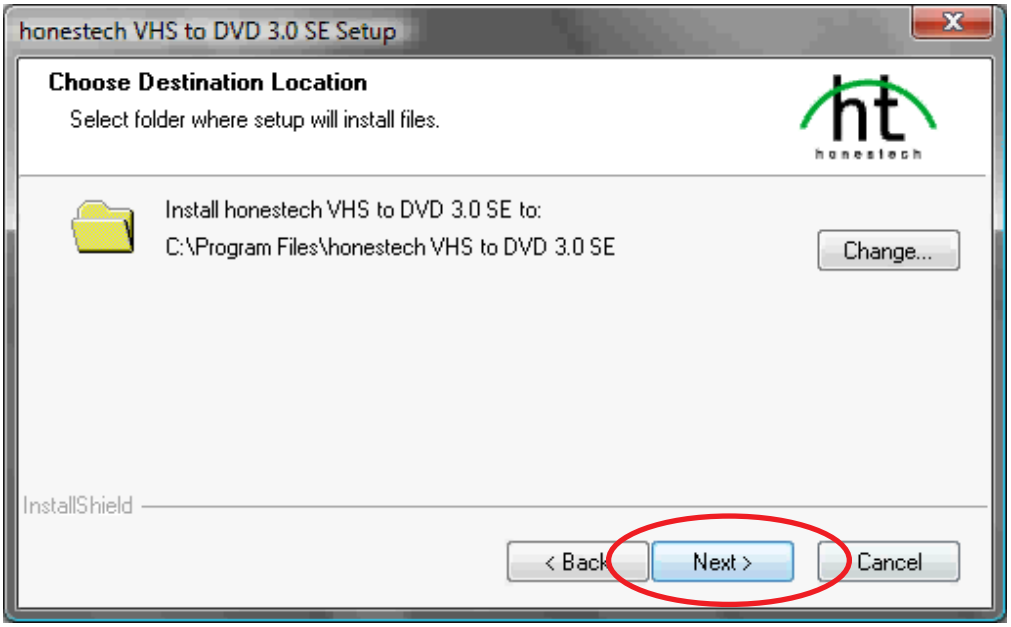
honestech VHS to DVD 3.0 SE Setup
Choose Destination Location
Select folder where setup will install files.
Install honestech VHS to DVD 3.0 SE to:
C:\Program Files\honestech VHS to DVD 3.0 SE
Change...
InstallShield
< Back
Next >
Cancel

6. When the Ready to Install the Program screen displays, click “Install.”

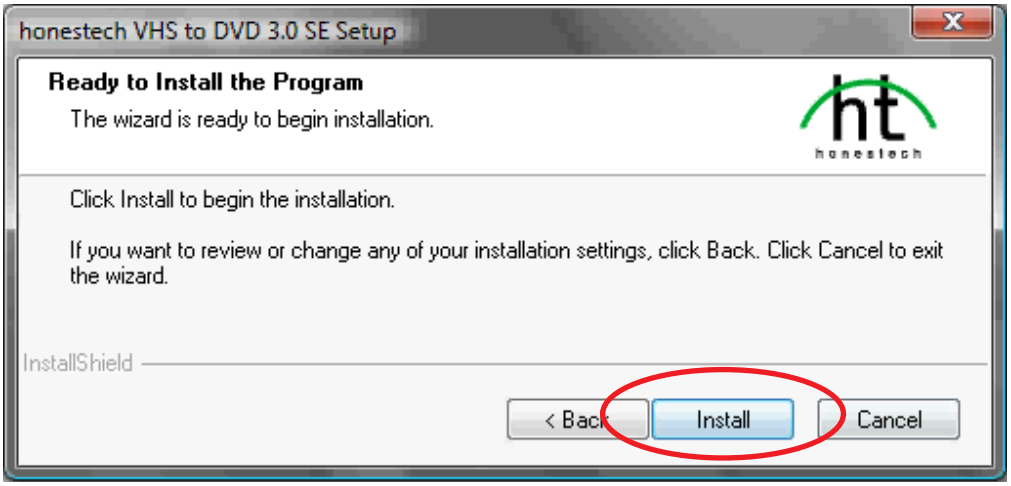
honestech VHS to DVD 3.0 SE Setup
Ready to Install the Program
The wizard is ready to begin installation.
Click Install to begin the installation.
If you want to review or change any of your installation settings, click Back. Click Cancel to exit the wizard.
InstallShield
< Back
Install
Cancel

7. The Honestech Setup screen (right) will display while files are loaded. When the InstallShield Wizard Complete screen displays (below), click “Finish.” The EZ Grabber and Honestech icons (far right) should appear on your desktop. Click to launch either application.

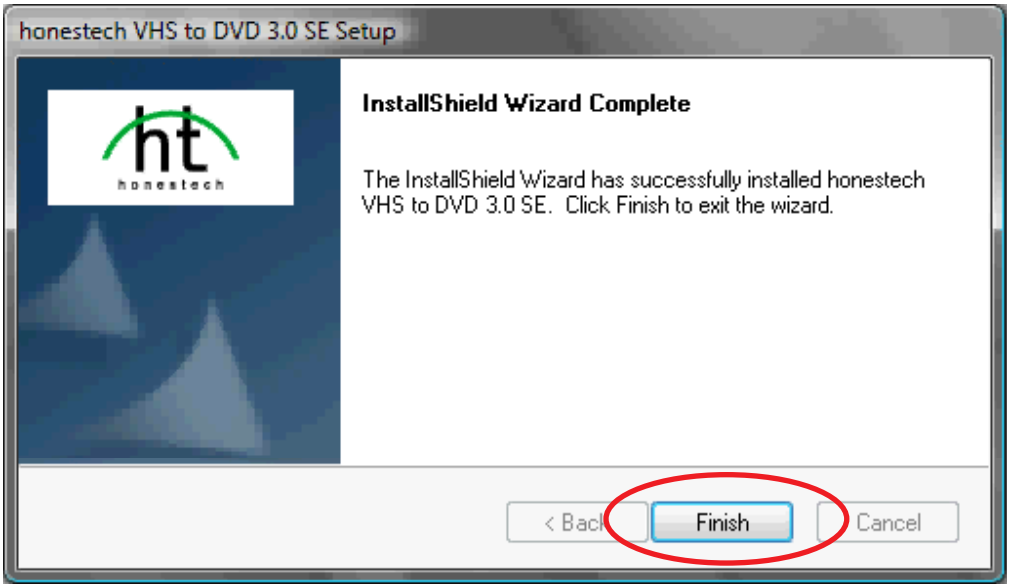
honestech VHS to DVD 3.0 SE Setup
InstallShield Wizard Complete
The InstallShield Wizard has successfully installed honestech VHS to DVD 3.0 SE. Click Finish to exit the wizard.
< Back
Finish
Cancel

8. Click “Users Guide” on the menu screen. When the directory displays (below), open the “HTVideoToDVD” file, then click on “Using the honestech VHS to DVD 2.5” to display the various Instructions options. (Sample screen shows launched application.)

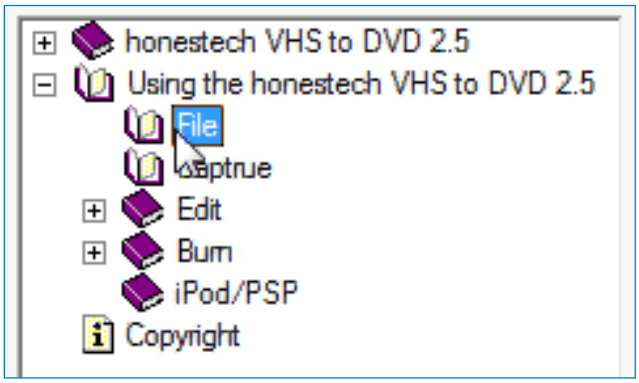

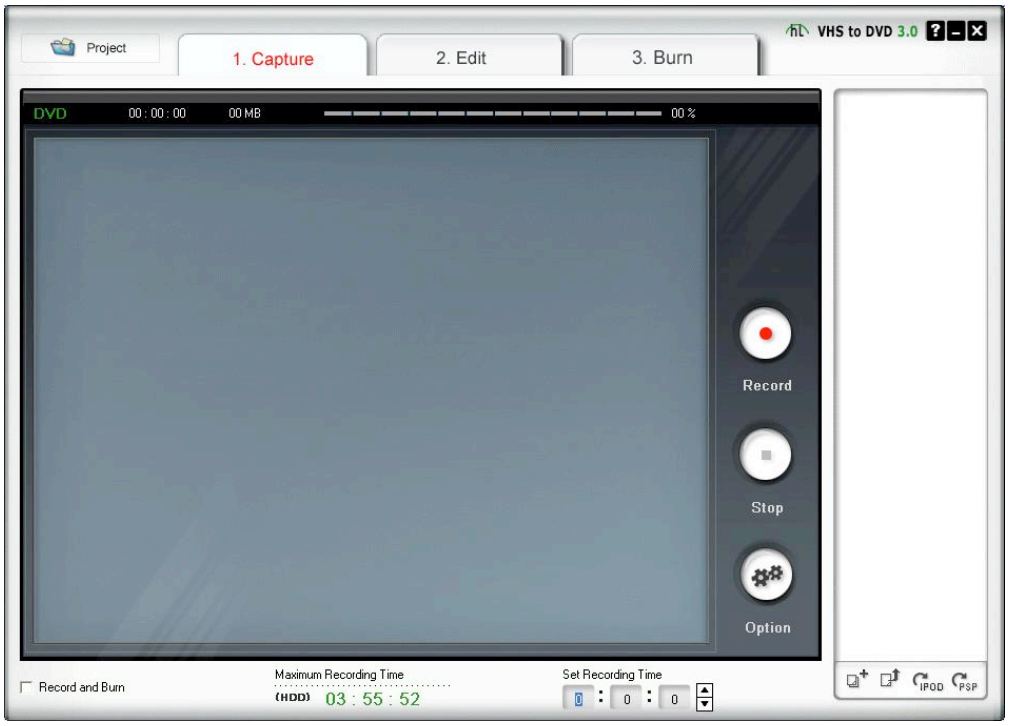

9. Click “Utility” on the menu screen if you don’t already have DirectX 9.0 or higher installed on your computer. Open the “DirectX” file in the directory to install it, as it is required in order to operate the Hi-Speed USB Audio/ Video Grabber.

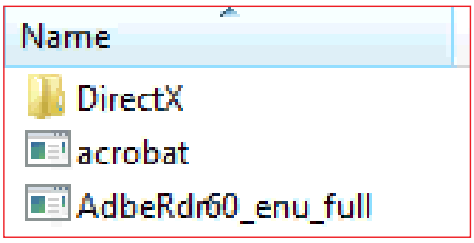

SPECIFICATIONS

Standards and Certifications

- USB 2.0
- NTSC
- PAL
- FCC
- CE
- RoHS

General

- Video system: NTSC, PAL, SECAM (automatic detection)
- Motion capture formats: DVD, SVCD, VCD, MPEG1/2/4, AVI, WMV, WMA, MP3
- Still image formats: JPEG, BMP
- Resolution: NTSC, 720 x 480 @ 30 fps; PAL, 720 x 576 @ 25 fps
- Inputs: S-video, RCA audio and video
- Chipset: CX 23102
- VHS2DVD software included (full version)
- Windows XP/Vista/7 compatible
- Cables: USB, 1.1 m (44 in.); audio/video, 7 cm (2.7 in.); RCA extension, 1.1 m (44 in.)
- 10.8 x 3.5 x 1.5 cm (4.25 x 1.4 x 0.6 in.); 70.8 g (2.5 oz.)

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

Disposal of Electric and Electronic Equipment

(applicable in the European Union and other European countries with separate collection systems)

This symbol on the product or its packaging indicates that this product shall not be treated as household waste. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. If your equipment contains easily removable batteries or accumulators, dispose of these separately according to your local requirements. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, contact your local city office, your household waste disposal service or the shop where you purchased this product. *In countries outside of the EU:* If you wish to discard this product, contact your local authorities and ask for the correct manner of disposal.

REGULATORY STATEMENTS

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of Federal Communications Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CE / R&TTE

This device complies with the requirements of the R&TTE Directive 1999/5/EC.

CE FC

WARRANTY INFORMATION

For warranty information, go to www.manhattan-products.com/warranty.

Copyright © MANHATTAN